



QUICK INSTALLATION GUIDE

210201 FN

www.jri-corp.com

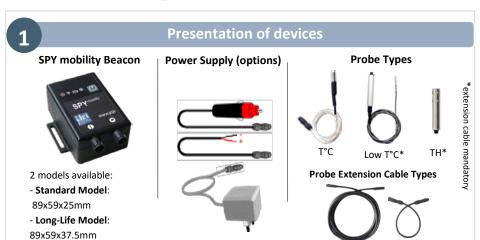



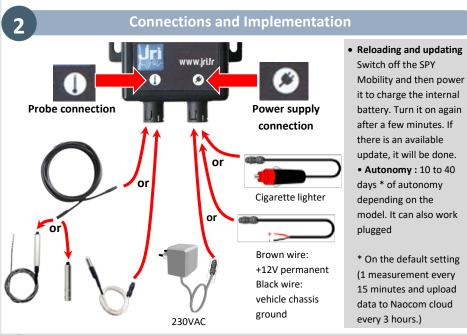

Configuration and Use

Connect to https://management.naocom.fr using the user ID and password given to you by JRI.

To configure your SPY mobility, consult the Online help accessible from the HELP menu located at the upper right of your screen.

MEANING OF INDICATOR LAMP

	State		
	Color	Lamp behavior	Meaning
Operating lamps	Off	Off	Beacon off
	Blue	Slow flashing (0.1s every 2s)	Beacon operating (cpu, GSM or GPS active)
	Blue	Rapid flashing (0.1s every 4s)	Beacon operating (cpu, GPS and GSM on standby)
	Blue	Rapid flashing (0.1s every 0.5s)	Beacon shutting down
	Blue	Continuous 2s	Brief pressure on the detected button
Communication lamps	Off	Continuous	GSM off
	Blue	Lit	Connected to GPRS network or data exchange in progress
Charging lamps	Off	Continuous	Unit off Autonomous mode: charge level correct
	Yellow	Rapid blinking (0.5s every 1s)	Unit under power: charging in progress
	Yellow	Rapid flashing (0.1s every 1s)	Autonomous mode: insuffisant charge
	Yellow	Continuous	Charging terminated and unit under power
Alarm lamps	Off	Off	Absence of temperature alarm
	Orange	Slow blinking (1s every 5s)	Pre-alarm in progress for a duration less than the timeout value
	Orange	Continuous	Pre-alarm in progress for a duration exceeding the timeout value
	Red	Slow blinking (1s every 2s)	Critical alarm in progress for a duration less than the timeout value
	Red	Continuous	Critical alarm in progress for a duration exceeding the timeout value
	Red	Rapid flashing (0.1s every 1s)	Probe absent
Operating, charging, alarm and communication lamps	Red, Blue, yellow and blue	Alternating lighting of each lamp	Unit initialization in progress
		Continuous	Pressure on button exceeding 3 seconds detected
Push button	Press continuously (3 seconds), until all lamps light		Unit power on Unit power off
	Press briefly while the unit is powered on		Start cycle of measurement, of positioning and of transmission of data to server